




# Micro Bulk Simple Operation Legend

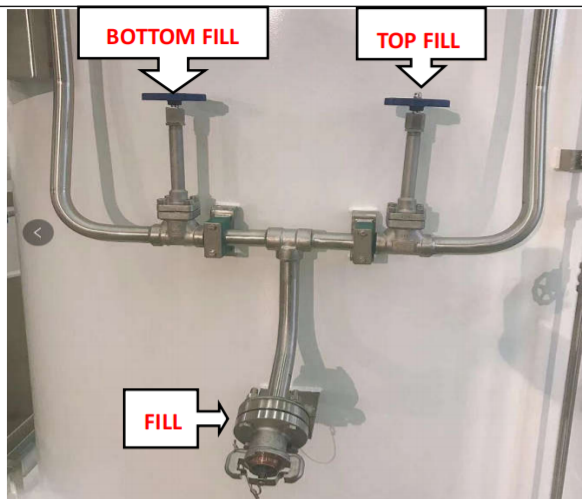


Before first filling, The tank should be cooled with cryogenic  
First fill, The BOTTOM and TOP FILL valves should be use  
at the same time. At other times, Only TOP FILL valve  
should be used when filling.

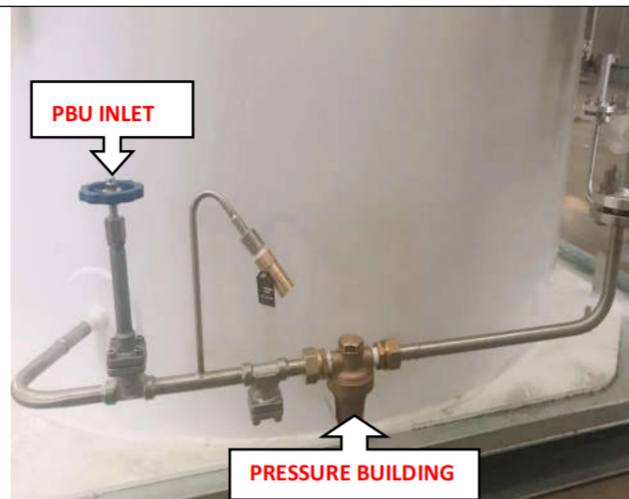


Using, The valve Normally open; If not use, The valve  
normally close;  
**NOTE:** The pressure regulating valve can adjust the  
pressure according to the need

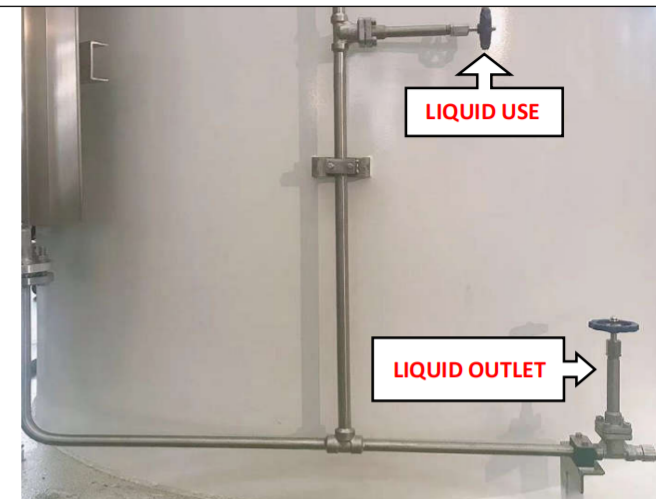

Using, The LIQUID USE VALVE Normally open; Not use,  
The valve Normally close.  
**NOTE:** if Not use liquid, The LIQUID OUTLET VALVE is close

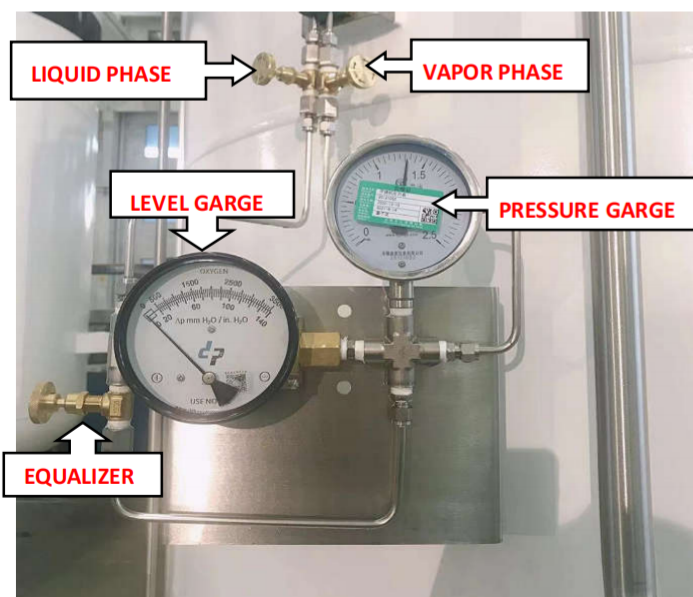

See "Warning" for operation.

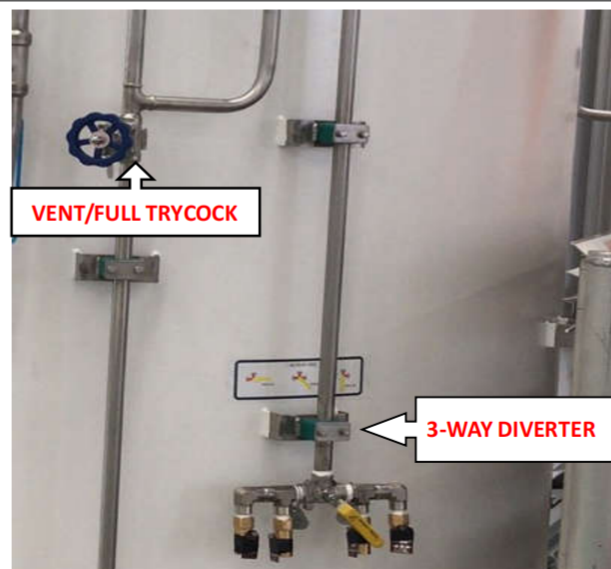

VENT/FULL TRYCOCK valve is used for tank overpressure  
or Full level discharge



All valves Normally open.  
**NOTE:** The pressure regulating valve can adjust the  
pressure according to the need